# **76 SERIES BALANCES**

# 3/8" TUBE BALANCE Rod Length Tube Length Nylon Bearing

Ordering Information

- 1. Measure metal tube length. (Do not include nylon bearing.)
- Measure spiral rod length. (Make sure rod is flush with screw hole end of tube before measuring.)
- Identify the color of the bearing (e.g., white, red, yellow or blue) and select our corresponding part number from the chart below.
- To identify the appropriate carrier or shoe to be attached and other related accessories, see pages 66-67.

**Note:** Attached carriers and related accessories must be ordered separately. If you want the ends attached, add the letter "A" to the suffix of the part number when ordering.

### **General Information**

- White, red and blue bearings are for sashes weighing up to 22 lbs; green bearings are for sashes weighing up to 26 lbs; yellow-green bearings are for sashes weighing 26-34 lbs. Consult your sales representative for ordering information.
- 2. The appropriate tensioning tools are 70-515 and 70-516 as shown on pages 60 and 96.

## Standard Rod

Standard Rod						
Tube Length	Rod Length	White Bearing	Red Bearing	Blue Bearing	Green* Bearing	Yellow Bearing
10"	10-5/8"	76-SMS10				
11"	11-5/8"	76-SMS11				
12"	12-5/8"	76-SMS12				
13"	13-5/8"	76-SMS13	76-SMS13R			
14"	14-5/8"	76-SMS14	76-SMS14R			
15"	15-5/8"	76-SMS15	76-SMS15R	76-SMS15B		
16"	16-5/8"		76-SMS16R			
17"	17-5/8"		76-SMS17R	76-SMS17B		
18"	18-5/8"		76-SMS18R	76-SMS18B		
19"	19-5/8"	76-SMS19	76-SMS19R	76-SMS19B	76-SMS19G	
20"	20-5/8"		76-SMS20R	76-SMS20B		
21"	21-5/8"		76-SMS21R	76-SMS21B	76-SMS21G	
22"	22-5/8"	76-SMS22	76-SMS22R	76-SMS22B		
23"	23-5/8"		76-SMS23R	76-SMS23B		76-SMS23Y
24"	24-5/8"		76-SMS24R	76-SMS24B		
25"	25-5/8"		76-SMS25R	76-SMS25B		76-SMS25Y
26"	26-5/8"	76-SMS26	76-SMS26R			
27"	27-5/8"		76-SMS27R			
28"	28-5/8"		76-SMS28R		76-SMS28G	
29"	29-5/8"		76-SMS29R		76-SMS29G	76-SMS29Y
30"	30-5/8"		76-SMS30R		76-SMS30G	76-SMS30Y
31"	31-5/8"		76-SMS31R		76-SMS31G	
32"	32-5/8"		76-SMS32R			
33"	33-5/8"	76-SMS33				76-SMS33Y
34"	34-5/8"	76-SMS34				
35"	35-5/8"	76-SMS35			76-SMS35G	76-SMS35Y
36"	36-5/8"	76-SMS36			76-SMS36G	76-SMS36Y
37"	37-5/8"	76-SMS37				
38"	38-5/8"	76-SMS38				76-SMS38Y
39"	39-5/8"	76-SMS39				
40"	40-5/8"	76-SMS40				76-SMS40Y

### **Extended Rod**

Exterided Rod						
Tube Length	Rod Length	White Bearing	Red Bearing	Blue Bearing	Green* Bearing	Yellow Bearing
10"	11-5/8"	76-SM10				
11"	12-5/8"	76-SM11				
12"	13-5/8"	76-SM12				
13"	14-5/8"	76-SM13	76-SM13R			
14"	15-5/8"	76-SM14	76-SM14R			
15"	16-5/8"	76-SM15	76-SM15R	76-SM15B		
16"	17-5/8"	76-SM16	76-SM16R	76-SM16B		
17"	18-5/8"	76-SM17	76-SM17R	76-SM17B		
18"	19-5/8"	76-SM18	76-SM18R	76-SM18B		
19"	20-5/8"		76-SM19R	76-SM19B		
20"	21-5/8"		76-SM20R	76-SM20B		
21"	22-5/8"		76-SM21R	76-SM21B		
22"	23-5/8"		76-SM22R	76-SM22B		
23"	24-5/8"		76-SM23R	76-SM23B		
24"	25-5/8"		76-SM24R	76-SM24B		
25"	26-5/8"		76-SM25R	76-SM25B		
26"	27-5/8"	76-SM26	76-SM26R			
27"	28-5/8"		76-SM27R			
28"	29-5/8"	76-SM28	76-SM28R			
29"	30-5/8"		76-SM29R			
30"	31-5/8"	76-SM30	76-SM30R			
31"	32-5/8"	76-SM31				
32"	33-5/8"	76-SM32	76-SM32R			
33"	34-5/8"	76-SM33				
34"	35-5/8"	76-SM34				
35"	36-5/8"	76-SM35				
36"	37-5/8"	76-SM36			76-SM36G	76-SM36Y
37"	38-5/8"	76-SM37				
38"	39-5/8"	76-SM38			76-SM38G	
39"	40-5/8"	76-SM39				
40"	41-5/8"	76-SM40				

\*Other sizes available upon request.

### **76 SERIES BALANCE ACCESSORIES**

HINGE LEAF ASSEMBLY


Hinge Assembly w/Metal Bracket

,		,	
	Part #	Color	
	76-518	White	
	76-518B	Black	

Hinge Assembly - No Metal Bracket


J-			_
	Part #	Color	
	76-523	White	
	76-523B	Black	


SILVERLINE

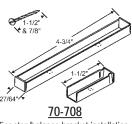


INSTALLATION KIT

For stop/balance bracket installation. Contains brackets, assorted screws and nails; enough for 1 window.

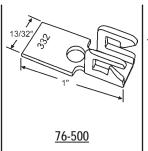

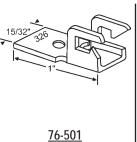

METAL SASH CLIPS

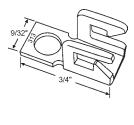

76-502 KINRO/SILVERLINE

# **76 SERIES BALANCE ACCESSORIES**

